




Installation Guidelines


SA1922

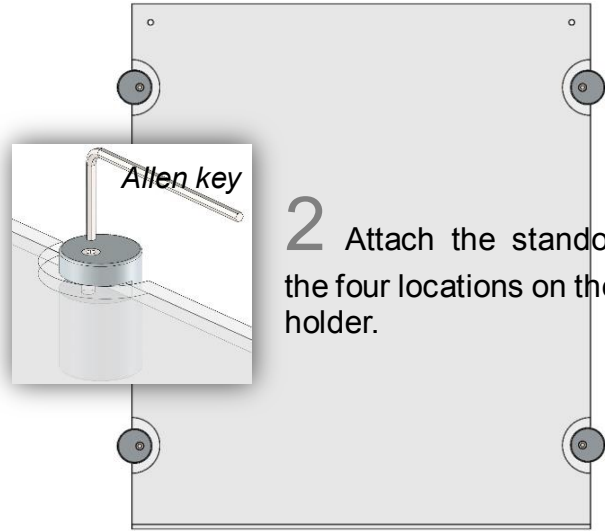

1 Separate each standoff from the base.



2 Attach the standoffs to the four locations on the sign holder.

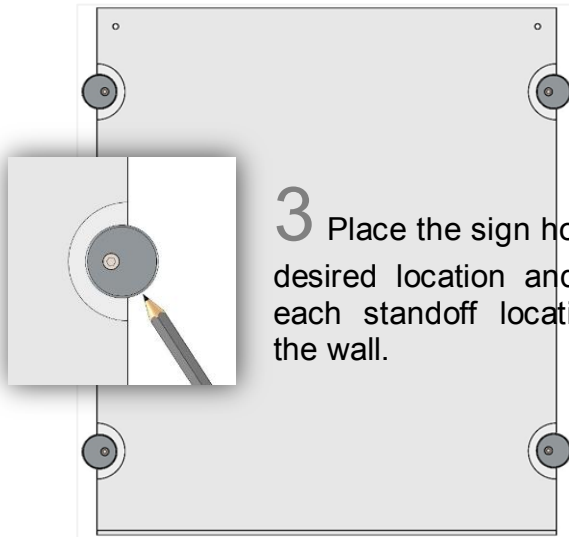


3 Place the sign holder at desired location and mark each standoff location on the wall.



4 Drill holes in the center of each marked spot. Insert wall anchors.



5 Install the bases with the included

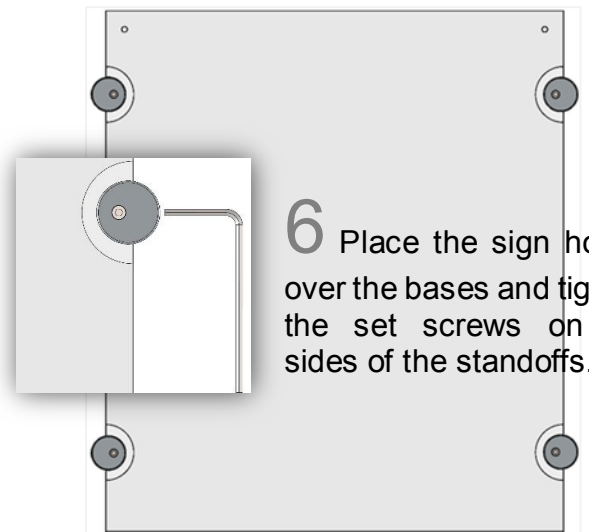

6 Place the sign holder over the bases and tighten the set screws on the sides of the standoffs.

Address: Htm-Mbs
6420 Benjamin Rd,
Tampa, FL. 33634



Phone : 1-813-938-6025
Fax : 1-813-425-9007
Mail: sales@mbs-standoffs